

SHIELD

SHIELD TOP CASE S

USER MANUAL



FURCHTLOS

CASE VARIANTS

This instruction manual applies to all variants of the SHIELD S case.

SHIELD S LUXE



FU02TCUP000S16EX



FU02TCUP000S14EX



FU02TCUP000S25EX

SHIELD S



FU02TCXX000S16EX



FU02TCXX000S14EX



FU02TCXX000S25EX

OPTIONAL ACCESSORIES

Below are the optional accessories that can be purchased separately.



Black color lid
FU02TCXX410001EX



White color lid
FU02TCXX410002EX



Comfort backrest
FU02TCXX420001EX



Silver color lid
FU02TCXX410004EX



Red color lid
FU02TCXX410005EX

SUPPORT PLATE COMPONENTS

 
Plastic Support Plate x1



Plastic Covers x2


Plastic Bushing x4

U Bracket x4



Long Screw x4

W Bracket x4

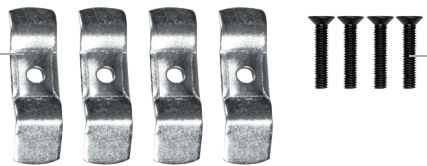


Short Screw x4

Washers x4




Nut x4

 TOOLS REQUIRED



Philips Screwdriver

 


#10 Wrench

SUPPORT PLATE ASSEMBLY



- 1** Place the support plate in the desired position on the rear rack and locate at least 4 fixation points in the rear rack and support plate that align.



- 2** a) If the fixation point is located within one of the long slots, place the U brackets in the slot to align with the fixation point.
b) If the fixation point is located within one of the smaller squares, place the plastic bushing within the square.


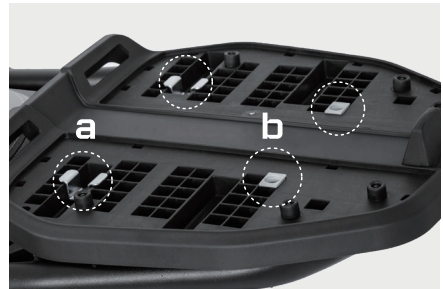


- 3** Insert the screws into the corresponding holes. From below the rear rack, place a washer and nut around the thread of each screw. If assembling to a pipe, it may be necessary to add a W bracket between the washer and nut. Use a Philips screwdriver to tighten all the screws as much as possible. After all the screws are tightened, place the plastic covers on top of the support plate by simply pressing down to click them into place.

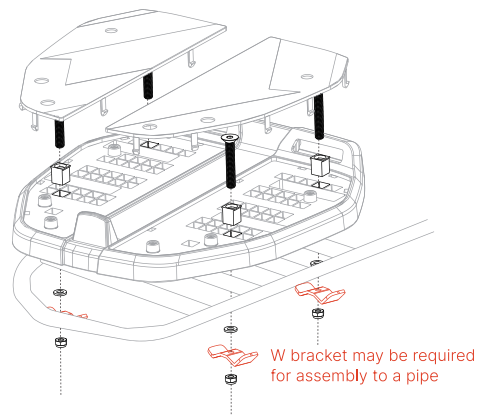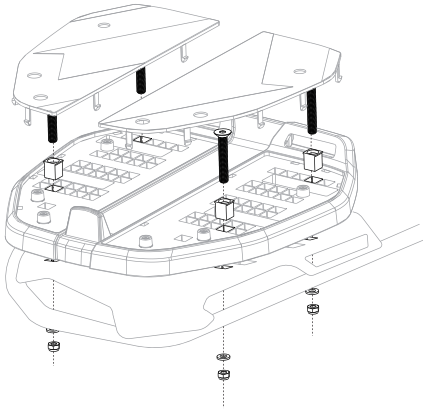


OPENING AND CLOSING THE CASE

- 1** To open the case, turn the key 20° counterclockwise. The lid will pop up slightly when the case is unlocked. Once the case is unlocked, use your hand to lift the lid fully open.

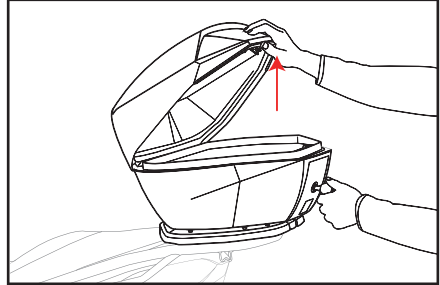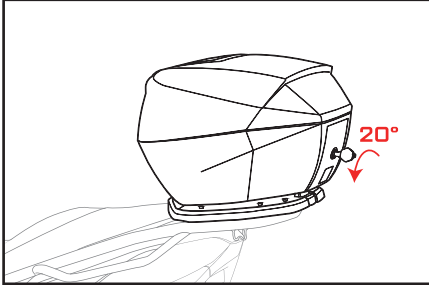

- 2** To close the case, press down on the lid until the lock engages.

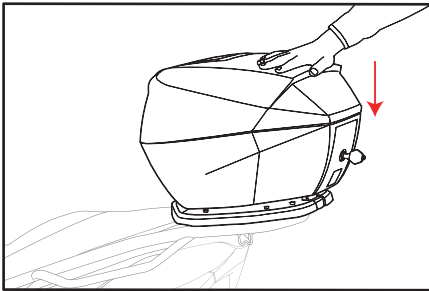

WARNING!



Be aware that the case will automatically lock when fully closed.

Pay attention not to close the keys inside the case!



MOUNTING THE TOP CASE

- !** To install the Top Case, it's necessary to first install the included support plate (see previous instructions).



- 1** Insert the rear legs of the case into the corresponding holes in the plate.

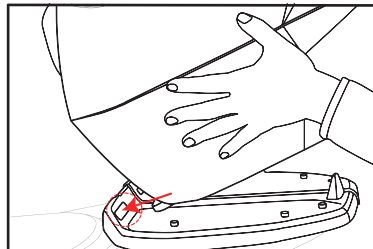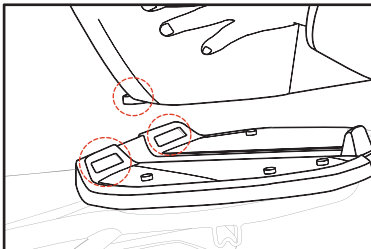

- 2** Insert the key into the case and turn it 45° clockwise.

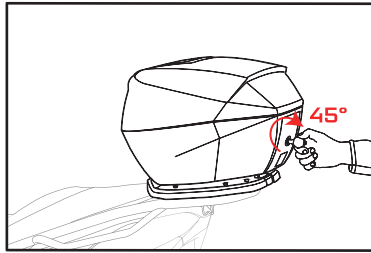
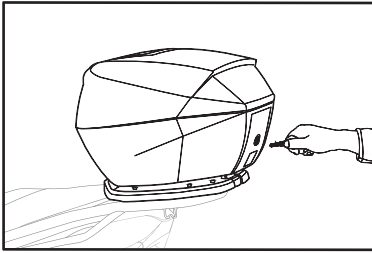


- 3** Press the button in the bottom of the case and lower it onto the plate to engage the wedge. Check that the top case is securely attached and cannot move freely.

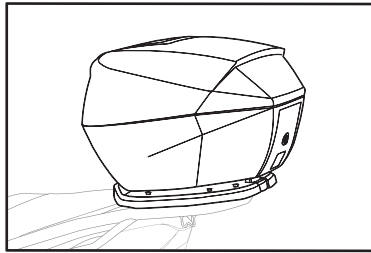
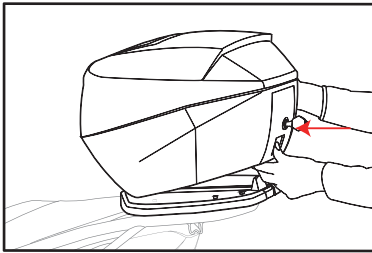


REMOVING THE TOP CASE

- 1** Insert the key into the case and turn it 45° clockwise.

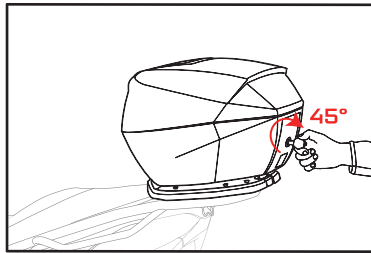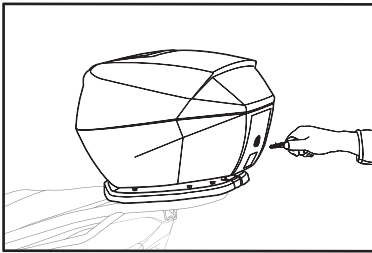

- 2** Press the button in the bottom of the case and lift it away from the plate.

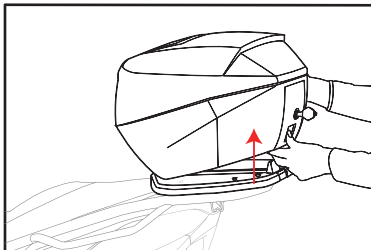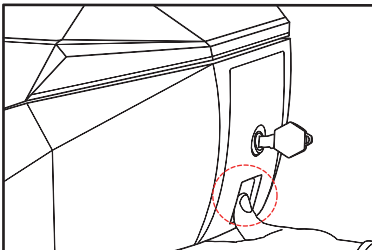

WARNINGS AND GUIDELINES

WARNING!

Please read the user manual carefully and follow the recommended assembly and care instructions.

It's recommended to check that the case is securely attached before each operation of the motorcycle.

Never drive the motorcycle with a case that is overloaded, that is not fully closed, that is not properly secured, or with damage that may affect the safe operation of the vehicle.

Please be mindful of how you pack your luggage. Cases should not be used to store flammable or explosive items or fragile items that can be easily broken.

CLEANING & MAINTENANCE

The cases should only be cleaned with water and a mild soap and dried with a soft cloth.

Do not use car wash detergents or other harsh cleaning agents or chemicals.

Do not use a pressure washer.

When the surface material is exposed to direct sunlight for a long time or is affected by environmental factors (such as haze, acid rain, etc.), the color may fade or change.

If the product is contaminated with gasoline or similar substances it must be cleaned immediately!

FURCHTLOS does not assume any responsibility for product damage and color change caused by improper cleaning and maintenance!



**CLEAN WITH A DAMP CLOTH OR
SOFT SPONGE**



DO NOT PRESSURE WASH



**CLEAN GASOLINE OR OTHER
SPILLS IMMEDIATELY!**



**DO NOT USE CHEMICALS OR HARSH
CLEANING AGENTS**



VIDEO TUTORIAL



WARRANTY REGISTRATION



FOLLOW & TAG
@FURCHTLOSMOTO

www.furchtlos-moto.com