RANGER

RANGER TOP CASE 50L

USER MANUAL

FURCHTLOS

CASE VARIANTS

This instruction manual applies to all variants of the RANGER Top Case.

Aero Aluminum

FU01TCXX005000

Anthracite

FU01TCXX005001

Cool White

FU01TCXX005002

Aero Aluminum ADV

FU08TCXX005000

Anthracite ADV

FU08TCXX005001

Cool White ADV

FU08TCXX005002

INCLUDED ACCESSORIES

The following components are required for the assembly of the key cylinder:

Included with the case

x1

Mechanism Lever



x1

Mechanism Cover

Included with the key cylinder (sold separately)

* Qty per case



x2

Spare key

x1*

Key cylinder

x1*

Washer

x1*

Screw

INSTALLING THE LOCK CYLINDER

⚠ **WARNING!** It's important to follow the instructions carefully and check that the lock mechanism functions properly before closing the lid of the case! If the lock mechanism is not properly installed and the case is closed, then it cannot be opened again!

1 Holding the key in a horizontal position, insert the lock cylinder into the front of the case, as shown in the image below.

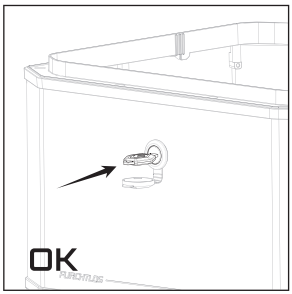

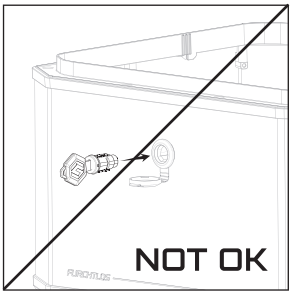

2 On the inside of the case, place the lever in a horizontal position on the reverse side of the key cylinder, then attach it with the washer and screw as shown in the image. While tightening the screw, use your other hand to push the key inwards towards the case to ensure a tight fit.

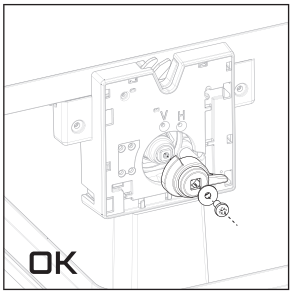

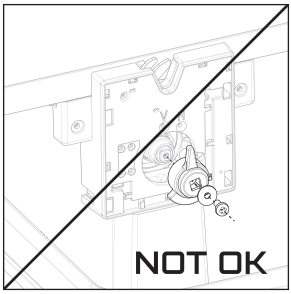

⚠ **CHECKPOINT:** A) Check that the key cannot be removed from the lock cylinder in the horizontal position. If the key can be removed, then the lock cylinder was installed in the incorrect position. Repeat steps 1-2 to ensure the cylinder is correctly installed and the key cannot be removed from the case when in the horizontal position.
If the check is OK, continue to the next step.

CHECKPOINT: B) With the key in the horizontal position, ensure that the button in the bottom of the top case can be pressed and released normally. If the button is jammed or does not function properly, do not assemble the case to the motorcycle and contact your dealer for support.
If the check is OK, continue to the next step.

3. Rotate the key clockwise until it stops (the key should be in a vertical position).

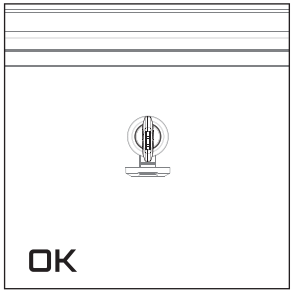

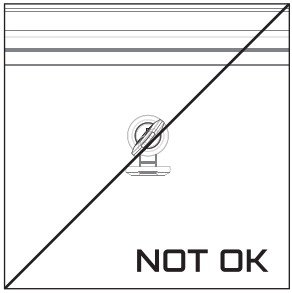

4. Remove the screw from the hole labeled V.

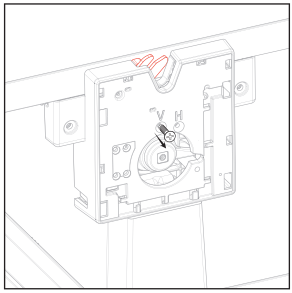

CHECKPOINT:
To check that the lock mechanism is functioning correctly, push down the metal hook (outlined in red in the image) to engage the lock. Then rotate the key clockwise to check that it unlocks. If the mechanism does not lock and unlock correctly, repeat steps 2-4 until it functions correctly.
If the check is OK, continue to the next step.

5. If the lock mechanism is functioning properly, attach the mechanism cover by placing it in position and pushing to engage the clips.

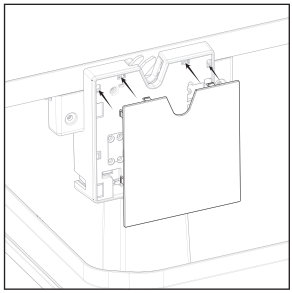

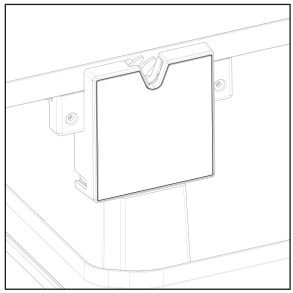

OPENING AND CLOSING THE CASE

1 To open the case, turn the key slightly clockwise. The lid will pop up slightly when the case is unlocked.Once the case is unlocked, use your hand to lift the lid fully open.

2 To close the case, press down on the lid until the lock engages.

WARNING!

Be aware that the case will automatically lock when fully closed.

Pay attention not to close the keys inside the case!

MOUNTING THE RANGER TOP CASE

⚠ To install the RANGER Top Case, it's necessary to first install a compatible FURCHTLOS support plate or integrated rear rack (sold separately).

1 Insert the rear legs of the case into the corresponding holes in the plate.

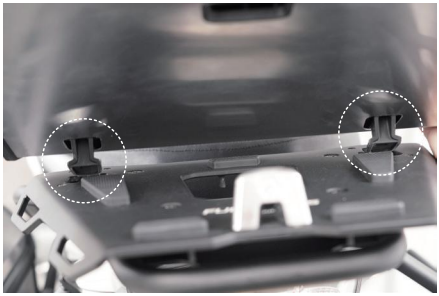

2 Then press down to engage the front wedge. Check that the top case is securely attached and cannot move freely.

REMOVING THE RANGER TOP CASE

1 Insert the key into the case and turn it 90 degrees counterclockwise.

2 Press the button in the bottom of the case and lift it away from the plate.

WARNINGS AND GUIDELINES

WARNING!

Please read the user manual carefully and follow the recommended assembly and care instructions.

It's recommended to check that the case is securely attached before each operation of the motorcycle.

Never drive the motorcycle with a case that is overloaded, that is not fully closed, that is not properly secured, or with damage that may affect the safe operation of the vehicle.

Please be mindful of how you pack your luggage. Cases should not be used to store flammable or explosive items or fragile items that can be easily broken.

CLEANING & MAINTENANCE

The cases should only be cleaned with water and a mild soap and dried with a soft cloth.

For natural aluminum cases, it's recommended to apply a silicone lubricant spray with a dry, soft cloth after the case is dry. The regular application of silicone lubricant spray helps to maintain a protective layer on the outside of the case and prevent permanent damage by harsh agents. This process can also be used to remove stains or marks which may appear after use.
Note: The silicone lubricant spray should only be used on natural Aero Aluminum cases. For cases in Anthracite, Cool White and other non-aluminum colors, the silicone lubricant spray does not need to be applied.

Do not use car wash detergents or other harsh cleaning agents or chemicals.

Do not use a pressure washer.

When the surface material is exposed to direct sunlight for a long time or is affected by environmental factors (such as haze, acid rain, etc.), the color may fade or change.

If the product is contaminated with gasoline or similar substances it must be cleaned immediately!

FURCHTLOS does not assume any responsibility for product damage and color change caused by improper cleaning and maintenance!

CLEAN WITH A DAMP CLOTH OR SOFT SPONGE

DO NOT PRESSURE WASH

CLEAN GASOLINE OR OTHER SPILLS IMMEDIATELY!

DO NOT USE CHEMICALS OR HARSH CLEANING AGENTS

VIDEO TUTORIAL

WARRANTY REGISTRATION

FOLLOW & TAG US
@FURCHTLOSMOTO_

www.furchtlos-moto.com